BDi

STREAM

1501G, 1502G, 1510G & 1523G

ASSEMBLY INSTRUCTIONS



BDIUSA.COM CUSTOMERSERVICE@BDIUSA.COM

Component List

A - Allen Wrench x 1

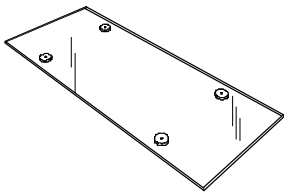

B - Glass Top x 1

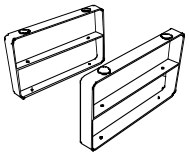

C - Metal Leg x 2

D - Socket Screw x 4

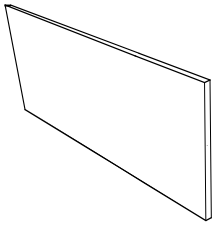

E - Lower Wood Shelf x 1

F - Long Socket Screw x 4

F

Stream is engineered for easy assembly. Carefully follow this procedure to prevent any damage.

Placement and Maintenance

Stream is designed for indoor use on level floors. Use damp cloth to clean steel parts. Clean wood veneer with a moist cloth. Use mild soap on a damp rag to remove difficult stains. DO NOT use ammonia-based glass cleaner to clean glass parts, doing so may damage finish on legs.

Step 1

Unpack and Identify

Open boxes, but DO NOT REMOVE SHELVES.

Unpack and identify the components at left. The assembly workspace should be a non-marring surface such as carpet. For missing hardware pieces, please contact BDI Customer Service at customerservice@bdiusa.com. For all other concerns, please contact your BDI Retailer.

Step 2

Attach Legs to Glass Top

Using the illustration as a guide, attach the **Metal Legs (C)** to the **Glass Top (B)** as shown using the **Socket Screw (D)** and **Allen Wrench (A).** This shold be done BEFORE removing top from the box so that **Glass Top (B)** is not scratched prior to assembly.

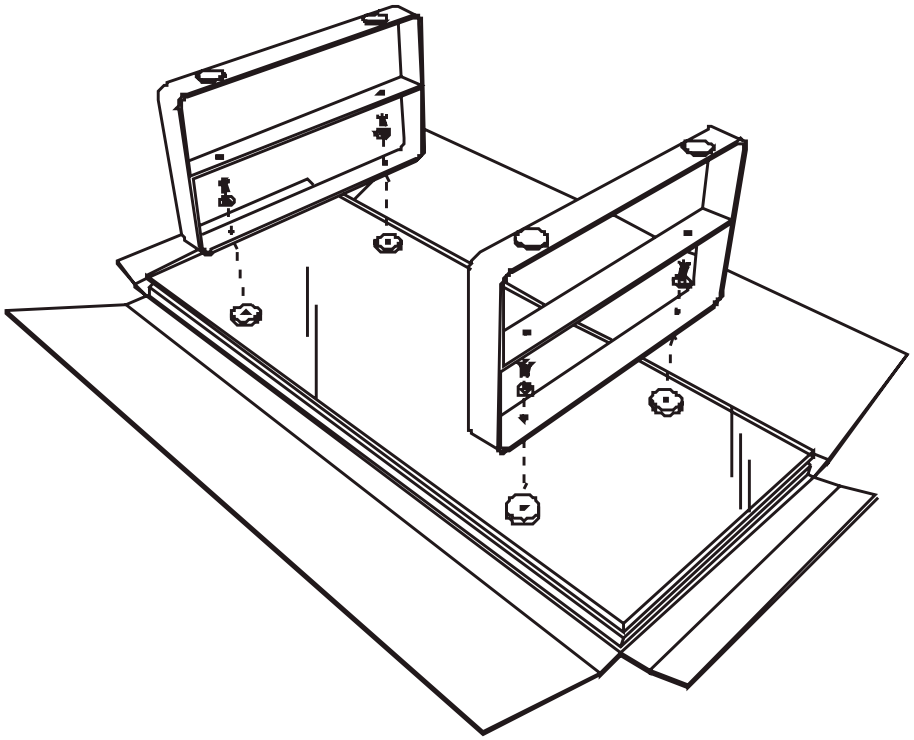

Designed by Cristian Wicha.
These distinctive product configurations are protected by US and international patents, trade dress, and/or copyright laws.
BDI is trademark of Becker Designed, Inc.
All rights reserved. ©2010, BDI
Made in China. 150115021523151OREV03182010v2

Step 3
Prepare to attach Wood Top
Carefully rotate 90 degrees so that the table is resting on its side ona non-marring surface. For easiest installation find a paperback book about 1" thick and place on floor between **Metal Legs (C)** as shown below,or find non-abrasive materials to temporarily cover inside edge of legs.

Step 4
Attach Wood Top
Carefully slide **Lower Wood Shelf (E)** into place being careful not to bump the **Metal Legs (C).** Rest the **Lower Wood Shelf (E)** on the book and attach using the **Long Socket Screw (F)** and **Allen Wrench (A).**